


INTERCOOLER

REMOVAL AND INSTALLATION


N11TA-

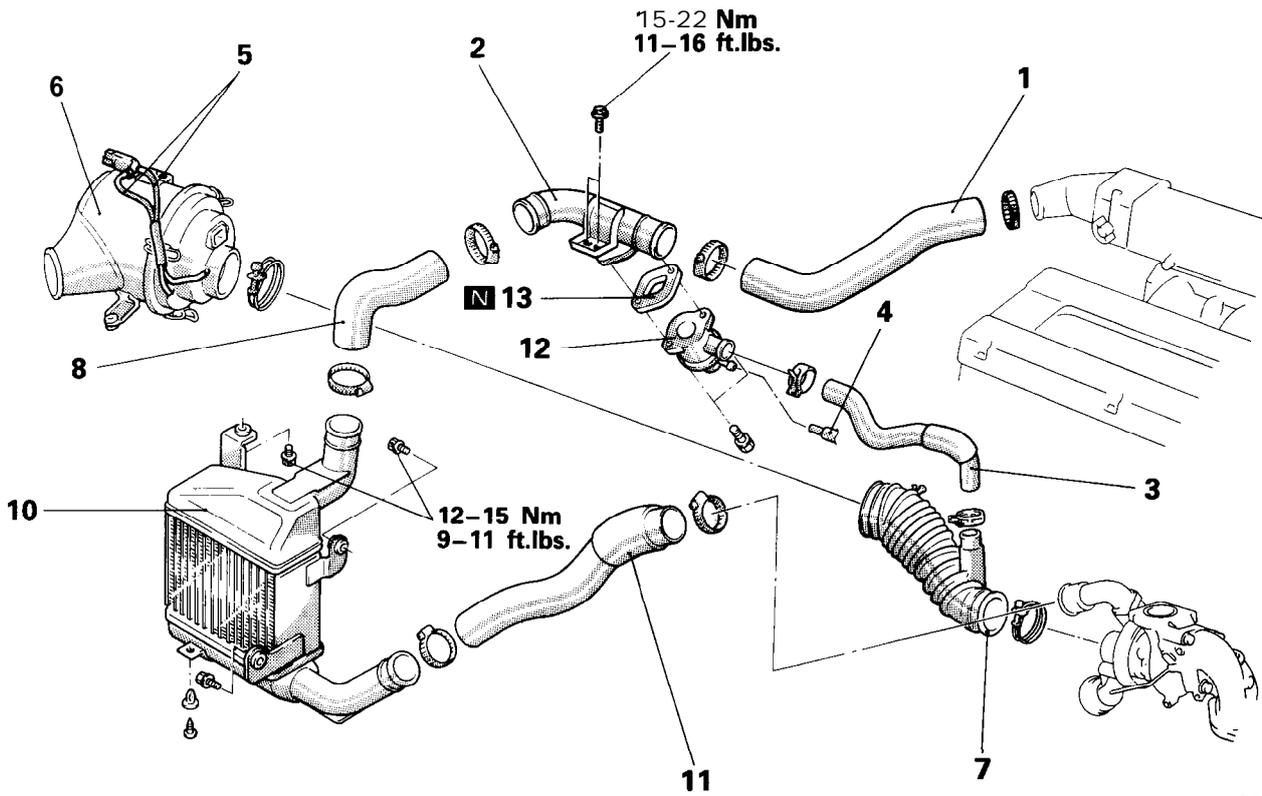

05A0185

Removal steps

- 1. Air hose C
- 2. Air pipe B
- 3. Air by-pass hose
- 4. Vacuum hose
- 5. Vacuum hose
- ☒ 6. Air cleaner
- 7. Air intake hose
- 8. Air hose B
- 9. Splash shield extension
- ◀ 10. Intercooler
- 11. Air hose A
- 12. Air by-pass valve
- 13. Gasket

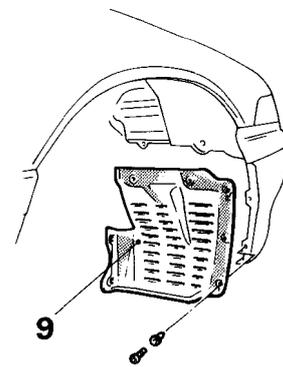

05A0140

NOTE

- (1) Reverse the removal procedures to reinstall.
- (2) ● ◀ ▶ : Refer to "Service Points of Removal".
- (3) ▶ ◀ : Refer to "Service Points of Installation".
- (4) ☒ : Non-reusable parts

SERVICE POINTS OF REMOVAL

N11TBABa

6. REMOVAL OF AIR CLEANER

Refer to P.11-9.

INSPECTION

N11TCAA

- Check the intercooler fins for bending, damage, or foreign matter.
- Check the intercooler hoses for cracking, damage, or wear.

SERVICE POINTS OF INSTALLATION

N11TDAB

10. INSTALLATION OF INTERCOOLER

Connect the air hoses and air pipes by aligning the paint marks on the hoses with the projections and indentations on the pipes.

Caution

Be careful not to allow any foreign matter to get into the hoses, pipes, or the intercooler itself.

NOTE

- ◁ : Projection or indentation (pipe)
 ◀ : Paint mark (hose)

