

# SUPER AFC

## SUPER AIR FLOW CONVERTER

### Instruction Manual

---


Thank you for purchasing this product.

Please carefully read this instruction manual to ensure proper use of this product.

Please store this manual inside of the vehicle for reference.

Please be sure to include this manual with the unit when selling.

APEX Integration Inc.

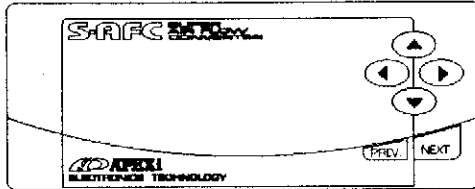

Product Name	SUPER AFC
Product Code	401-A007
Vehicle Applications	Vehicles specified in application chart
Purpose	Adjustment of Air flow/Pressure Sensor Signal

APEX i  
ELECTRONICS TECHNOLOGY

Chasing Our Dreams - A complete line of customized car and automotive parts developed with state of the art technology and new ideas. Our company is APEX which means the highest in quality.

Instruction Manual 7107-0060-00 '98.12.11 Vol. 1

# ■ Table of Contents

■ Safety Precautions	1
● Signal Words and their Meaning	1
● Display	1
▲ Warning	2
▲ Caution	3
■ To Begin	4
■ Product Parts and Functions	5
● Parts List	5
● Product	6
■ Product Function Flow Chart	7
■ <i>main</i> «Main Menu Selection»	8
① Main Menu Selection	
■ <i>monitor</i> «Monitor Mode Selection»	9
② Monitor Mode Selection 【monitor】	
②-a Monitor Mode Selection 【monitor】→【1,2,3,4Channel】	
● Monitor Mode Data Glossary	
■ <i>monitor</i> «Data Display»	10
● If Selecting [1channel]	10
● If Selecting [2channel]~[4channel]	10
a. Real-Time Display	11
b. Peak-Hold Function	12
c. Hold Function	13
d. Memory /Replay Function	13
■ <i>monitor</i> «2D Trace Mode»	14
②-b 2D Trace Mode 【monitor】→【Rev.-【Y】】	14
a. Real-Time Display	15
b. Hold Function	16
c. Clearing the Ghost Map Trace	16
■ <i>setting</i> «Setting Mode»	17
③ Setting Mode 【setting】	

●Setting Items

**■setting 《Hi-thrtl》 《Lo-thrtl》** 18

---

③-a Setting Air Flow % Correction(High Throttle) [setting]→[Hi-thrtl]

③-b Setting Air Flow % Correction(Lo Throttle) [setting]→[Lo-thrtl]

**■setting 《Th-Point》** 19

---

③-c Setting Hi/Lo Throttle % [setting]→[Th-Point]

**■setting 《Ne-Point》** 21

---

③-d Setting Air Flow % Correction According to RPM [setting]→[Ne-Point]

**■setting 《Dec.-Air》** 22

---

③-e Setting Deceleration Air Flow Correction [setting]→[Dec.-Air]

**■etc. 《Misc.》** 23

---

④Misc. [etc.]

**■etc. 《Setting Sensor Type》** 24

---

④-a Setting Sensor Type [etc.]→[Sensor Type] 24

If Selecting [1.Hot Wire] 24

If Selecting [3.Pressure] 24

If Selecting [2.Flap ] 27

If Selecting [4.Karman ] 27

Sensor Type Graph(TOYOTA) 28

Sensor Type Graph(NISSAN) 31

Sensor Type Graph(MITSUBISHI) 33

Sensor Type Graph(HONDA) 34

Sensor Type Graph(MAZDA) 35

Sensor Type Graph(SUBARU) 35

Sensor Type Graph(ISUZU) 35

Sensor Type Graph(SUZUKI) 36

Sensor Type Graph(DAIHATSU) 36

**■etc. 《Setting Cylinder/Throttle Sensor Type》** 37

---

④-b Setting Cylinder/Throttle Sensor Type [etc.]→[Car Select]

**■etc. 《Setting Graph Scale》** 38

---

④-c Setting Graph Scale [etc.]→[Grph Scale]

<b>■etc.</b> 《Checking Sensor Voltage》	<b>39</b>
④-d Checking Sensor Voltage [etc.]→[Sensor chk]	
<b>■etc.</b> 《Setting Display Brightness》	<b>39</b>
④-e Setting Display Brightness [etc.]→[VFD Bright]	
<b>■etc.</b> 《Restore Default Settings》	<b>40</b>
④-d Restore Default Settings [etc.]→[Initialize]	
<b>■Installation</b>	<b>41</b>
●SUPER AFC Installation	41
●Wiring Diagram	43
●Checkpoints After Installation	45
●With the Ignition Key ON···	45
In Case of Malfunction	<b>46</b>
Product Specifications	<b>46</b>
About the Warranty	<b>46</b>
Manual Information	<b>46</b>

# ■ Safety Precautions

Please be sure to read the safety precautions.

Please keep this manual in a readily accessible location for future reference.

● Signal Words and their Meaning

We have included warnings throughout the manual to protect both the user and others from harm.

These key words are called "Signal Words."

Please carefully read the cautions before reading the rest of the manual.

● Display



Failure to obey this warning will likely result in DEATH or severe injury to the user.



Failure to obey this warning may cause DEATH or severe injury to the user.



Failure to obey this warning will likely result in light injury to the user, product damage, or damage to the surrounding area.

## ■ Safety Precautions (cont'd)

### WARNING

- Never install this product on a vehicle that is not listed in this manual.  
We do not guarantee product operation on non-listed vehicle applications. Failure to follow instructions may cause unexpected accidents.  
.....
- Discontinue use of this product immediately if there is smoke or a burning odor.  
Failure to do so may result in engine or vehicle fire. Please take the unit back to the place of purchase for further assistance.  
.....
- Only use this product for the intended purposes listed within this manual.  
APEX is not responsible for any harm or accidents caused by the improper use of this product.  
.....
- Never operate this unit while driving.  
Failure to do so may result in injury or accident.  
.....
- Securely mount this unit away from any area that may affect driving.  
Failure to do so may result in injury or accident.  
.....
- This unit is designed only for DC12V type vehicles with a negative ground.  
Do not install on big trucks, refrigerated trucks, or diesel trucks with 24V.  
This could lead to engine fire.  
.....
- Be sure to disconnect the negative terminal of the battery before proceeding with installation.  
Failure to do so may result in vehicle fire, electrical shortage, electrical system damage, and product damage.  
.....
- Be sure to securely hold the connector when disconnecting  
Failure to do so may result in electrical shortage and damage to the unit.  
.....
- Always connect the wiring EXACTLY as shown in the instruction manual.  
Failure to do so may result in product failure and engine damage.  
.....
- Do not adjust the unit while driving. Obey all of the rules and regulations of the highway while driving.  
Failure to do so may result in accidents.  
.....

## ■ Safety Precautions (cont'd)

### ▲ CAUTION

● Installation should only be performed by an experienced installer.  
Installation requires experience and skill. To the installer: Please install the product in a professional and functionally correct manner.

---

● Never disassemble, modify, or tamper with this unit.  
Failure to do so may lead to electrical fire, vehicle fire, and engine damage.

---

● Do not drop or expose this unit to excessive shock.  
This may damage the unit and cause damage to the engine.

---

● Keep this unit away from direct sunlight and water.  
Failure to do so may cause product failure eventually leading to electrical fire, vehicle fire, and engine damage.

---

# ■ To Begin

Thank you for purchasing the Super AFC.  
In order to properly use this unit, please read this instruction manual carefully.

The Super AFC is a high precision controller that can adjust the air flow meter signal / pressure sensor signal. Also, by utilizing the VFD ( Vacuum Fluorescent Display,) The unit can display air flow meter capacity %, engine RPM, and throttle position %.

~Features~

- ① Air flow meter signal/ pressure sensor signal modifications at desired engine RPM levels.
- ② Air flow meter signal/ pressure sensor signal modifications according to throttle position.
- ③ Function to prevent engine stall on hot wire air flow meter vehicles due to lack of blow off return.
- ④ Monitor display of all input signals and correction factors.











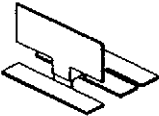

## ▲ CAUTION

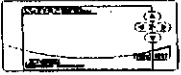- Do not use this product on any vehicle that is not specified in our vehicle specific application guide.
- Do not use this product for any other purpose than its original intent.
- Installation of this unit MAY cause radio noise or TV interference depending upon installation position and method.
- Mild heat caused by the unit is not unusual.
- Please do not use this unit under extremely hot or cold conditions.



# Product Parts and Functions


## Parts List

1. Unit . . . . . 1	2. Inst. Manual • Warr. Card
	
3. Signal Harness . . . 1	4. Splitting Harness . . 1
	
5. Male Fitting . . . . 2	6. Female Fitting . . . 2
	
7. Male Sleeve . . . . 2	8. Female Sleeve . . . 2
	
9. Splitting Caps . . . 5	10. Double Sided tape • 4
	
11. Mounting Bracket . . 1	12. Vehicle Specific Application Guide • Operational Diagramx1
	

# ■Product Parts and Functions (cont'd)

## ⚠ CAUTION


- Be sure to check the contents of the box BEFORE attempting installation.  
Please contact our office if there any missing or broken parts.  
(Please contact your dealer of purchase for more information)
- Please contact your dealer of purchase for more instruction manuals or misc. parts.

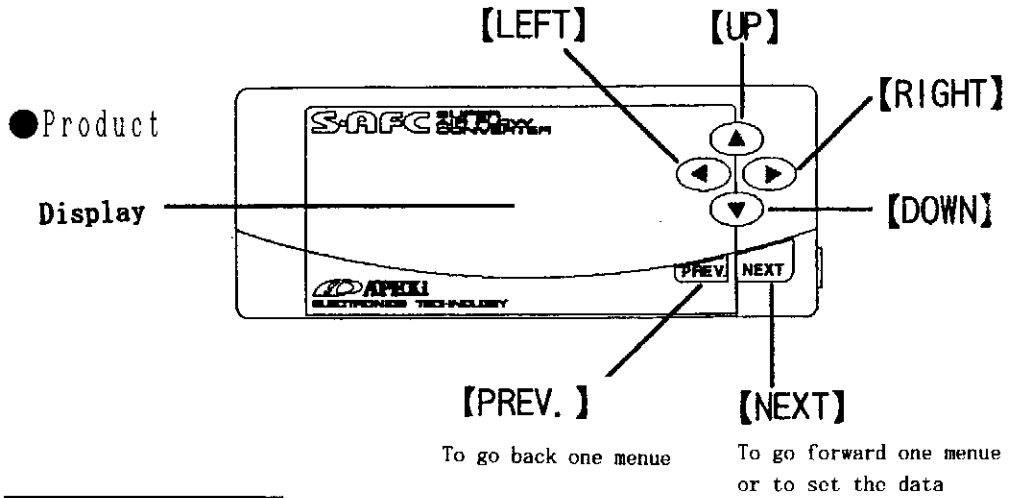

## ⚠ CAUTION

- Be sure to double check for proper vehicle application and installation before use.  
Installation of the Super AFC on a non-listed vehicle may lead to sever engine damage.

# Product Function Flow Chart

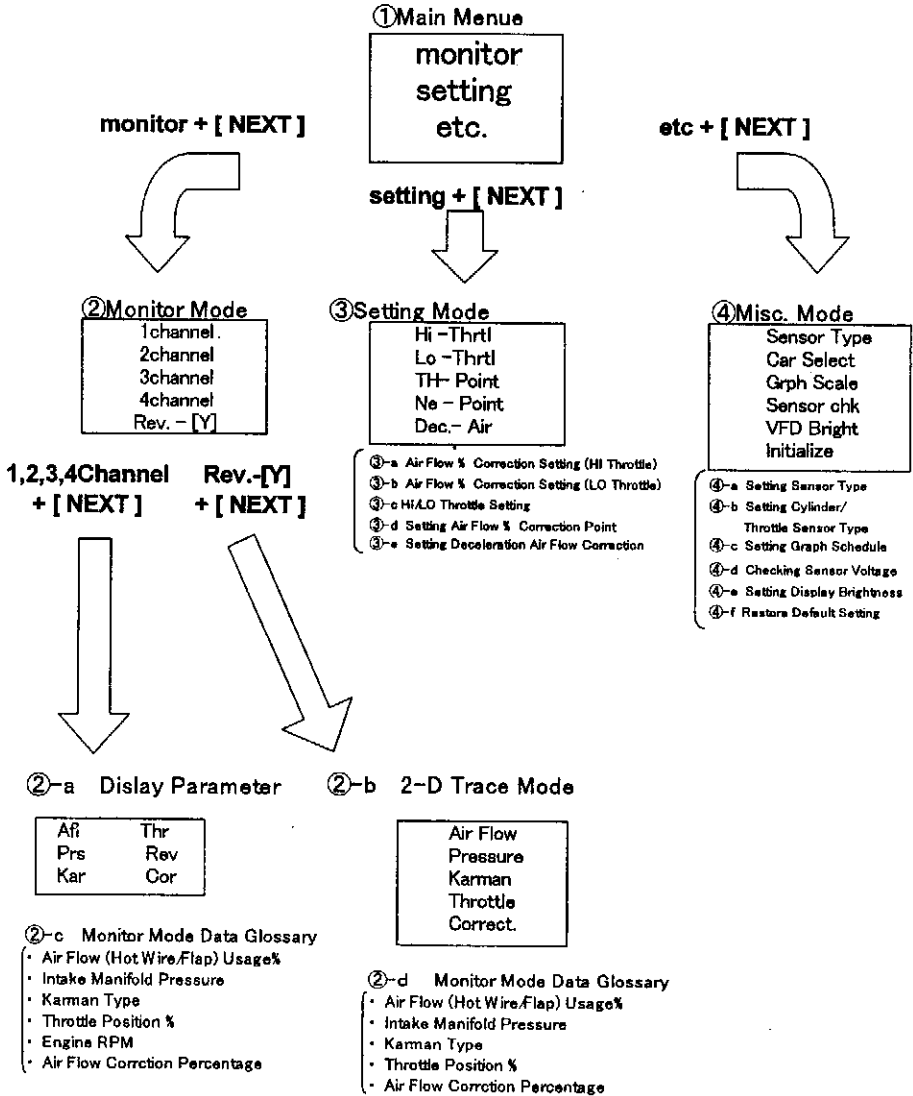

## CAUTION

- Do not attempt tuning of the Super AFC without extensive knowledge of the engine specifications. Improper tuning may lead to engine failure and vehicle damage.
- Tuning should only be performed by an experienced professional. Improper tuning WILL damage the engine.

## ■ main «Main Menu Selection»

The Super AFC allows the user to adjust the air flow meter/pressure sensor output voltage.

The Super AFC stored all tuning information in memory and will not erase the data until the INITIALIZE function is performed. Removing the battery terminal or ignition key will not affect the data.

### ⚠ WARNING


- Do not operate this unit while driving.  
Operating this unit while driving may interfere with normal driving procedure and be the cause of accidents.

### ⚠ CAUTIONS

- Never start the engine or turn the ignition key ON/OFF while the Super AFC is in use.  
Failure to do so may cause improper operation and damage the engine.

## ① Main menu Selection

This is the Basic Super AFC Menu

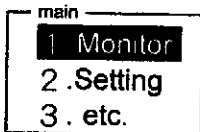

Main Menu

### 1 «Selection»

【▲】 up Key / 【▼】 down key

Use these keys to navigate through the menu.  
The selected menu will appear on the screen.

### 2 «Set»

Use the 【next】 Key

The selected menu will appear on the screen

Simultaneously depressing the 【NEXT】 KEY and 【PREV.】 KEY for 0.5 sec. will toggle between **Monitor** MODE and **Setting** MODE.

## ■ monitor «Monitor Mode Selection»

### ② Monitor Mode Selection **[monitor]**

Selecting **[monitor]** will display the **monitor mode selection**

```

monitor
┌───────────┐
│ [monitor] │
│ 2 Channel │
│ 3 Channel │
│ 4 Channel │
│ Rev. - [Y] │
└───────────┘
  
```

#### 1 «Selection»

**[▲]** up Key / **[▼]** down Key

Use these keys to select desired parameters

The selected parameters will appear on the screen

#### 2 «Enter»

**[next]** Key

Use this key to finalize the selection

The selected parameters will appear on the screen

- [ 1 channel ] selection . . . displays 1 parameter of data
- [ 2 channel ] selection . . . displays 2 parameters of data
- [ 3 channel ] selection . . . displays 3 parameters of data
- [ 4 channel ] selection . . . displays 4 parameters of data
- [ Rev. - [Y] ] selection . . . Displays engine RPM in a 2 dimensional sideway graph

### ②-a Monitor Mode Selection **[monitor]** → **[1,2,3,4Channel]**

After the channel selection has been made, data parameter can be selected

Data parameter choices are listed below.

### ● Monitor Mode Data Glossary

1. A f l .....Air Flow (Hot Wire/Flap) usage %
2. P r s .....Intake Manifold Pressure
3. K a r .....Karman Type
4. T h r .....Throttle Position %
5. R e v .....Engine RPM
6. C o r .....Air Flow Correction Percentage

## ■ monitor 《Data Display》

### ● If Selecting [1channel]

select	
Afl	Thr
Prs	Rev
<b>Kar</b>	Cor

#### 1 《Display Parameter Selection》

【▲】 up Key / 【▼】 down Key

Use the above keys to select

The selected parameter will illuminate, and a selection number will appear to the left of the desired parameter

#### 2 《Display Parameter Entry》

【NEXT】 Key

Use this key to finalize selection

This will display desired parameter

### ● If Selecting [ 2channel ] ~ [4channel]

select	
<b>1</b> Afl	Thr
2 Prs	Rev
Kar	Cor

#### 1 《Channel Selection》

【▲】 up Key / 【▼】 down Key

Use the above keys to select

The selected parameter will illuminate

#### 2 《Channel Entry》

【▶】 right Key

This key will display data parameters

The channel and data parameter will illuminate

select	
<b>1</b> Afl	Thr
2 Prs	Rev
Kar	Cor

#### 3 《Data Parameter Selection》

【▲】 up Key / 【▼】 down Key

Use these keys to select desired data parameter

The selected data parameter will illuminate

#### **Advice!**

Channels that have been selected previously cannot be used for data parameters.

#### 4 《Data Parameter Entry》



【NEXT】 Key

Use this key to finalize selection


This will initiate display of selected parameters

# ■ monitor «Data Display»

The Super AFC allows the user to display the data from the data parameter entry section  
 ②-a in numbers, graphs, and analog meters.

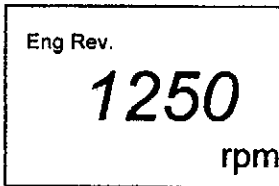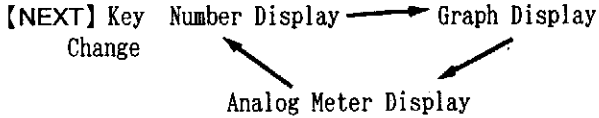

(NEXT) Key  
Change

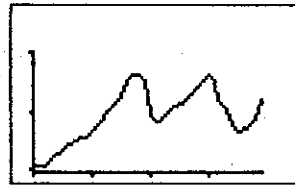

(NEXT) Key  
Change



(NEXT) Key

※The Analog Meter display can only display 2 parameters at once  
 If selecting [3channel] [4channel], the display will only show No. 1 and 2


These 2 parameters  
will be displayed

select	
2 Thr	
3 Rev	
4 Cor	


## ■ monitor 《Data Display》

Peak Hold values may be displayed in Number Mode and Analog Meter Mode  
 However, Cor does not have Peak - Hold capabilities

※If in Number Display Mode

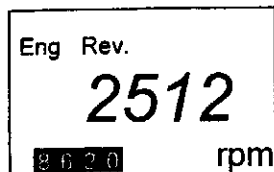

Peak Value

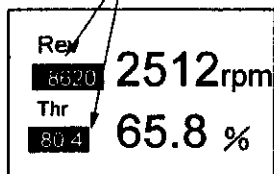

### 1 《Peak-Hold Selection》

※During Real-Time Display

【▲】 up Key

Use the above key for Peak-Hold display

The desired information will illuminate on the display

3ch - 4ch will not have real time display during peak-hold mode

### 2 《Peak-Hold Value Reset》

※During Peak-Hold

【▶】 right Key

This will reset the Peak-Hold Value

### 3 《Releasing Peak-Hold Function》


【▼】 down Key

This will release the Peak- Hold Function

※If in Analog Meter Display Mode



【▲】 up Key

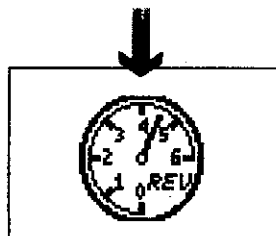

During Peak-Hold

### 1 《Setting Peak Hold》

※During Real-Time Display Mode

【▲】 up Key

This will display the Peak-Hold value

### 2 《Peak-Hold Value Reset》

※During Peak-Hold

【▶】 right Key

This will reset the Peak-Hold Value

### 3 《Releasing Peak-Hold Function》


【▼】 down Key

This will release the Peak- Hold Function.



## ■ monitor 《Data Display》

It is possible to freeze the display data during Number Display Mode and Analog Meter Display Mode

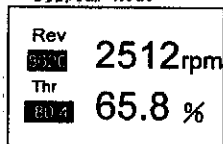


### 1 《Setting Data Hold》

※During Number Display/ Analog Meter Mode

【◀】 left Key

This key will HOLD the data displayed on the screen

【◀】 left Key

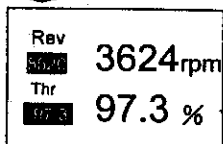

### 2 《Releasing Data Hold》

※During HOLD

【◀】 left Key


This will return the display to normal mode

HOLD release

【▼】 down Key

It is possible to MEMORIZE and REPLAY the display data during Graph Mode

During Memory

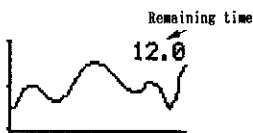

【▼】 down Key

Stop Memory



### 1 《Graph Display Memory》

※During Real-Time Display.

【▲】 up Key

This key will begin memorization of display data  
Memorization times are listed below

[1channel] . . . . 60sec

[2channel] . . . . 30sec

[3channel] . . . . 30sec

[4channel] . . . . 15sec

### 2 《Memorization conclusion in Graph Display》


※During Graph Display Mode

【▼】 down Key


This will stop MEMORY display

## ■ monitor 《Data Display》

During Real-Time Display



【▶】 right Key



### 3 《Graph Display Replay》

※During Real-Time Display

【▶】 right Key

This will initiate the memorized graph towards the left of the display  
If you press the key below DURING replay again,

【▶】 right Key

The replay graph will stop

Also,

【◀】 left Key

This will initiate the memorized graph towards the right of the display

If you press the key below DURING replay again,

【◀】 left Key

The replay graph will stop

### 4 《Ending Graph Display》

※During Graph Display Mode

【▼】 down Key

This will end the Graph Display Replay Mode


## ②-b 2-D Trace Mode [monitor] → [Rev.- [Y] ]

With the horizontal graph value being engine RPM, select the vertical value from below.

### ● Display Data Glossary

1. A f l .....Air Flow (Hot Wire/Flap) usage %
2. P r s .....Intake Manifold Pressure
3. K a r .....Karman Type
4. T h r .....Throttle Position %
5. C o r .....Air Flow Correction Percentage

■ monitor 《2-D Trace Mode》

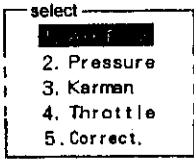

1 《Data Parameter Selection》

【▲】 up Key / 【▼】 down Key

Use these keys to select  
Selected parameters will illuminate



2 《Data Parameter Entry》

【NEXT】 Key


Finalize selection with this key  
This will initialize the display for the selected parameter



It is possible to display the data from the 2-D trace mode as the vertical graph value, while the engine RPM will be the horizontal graph value

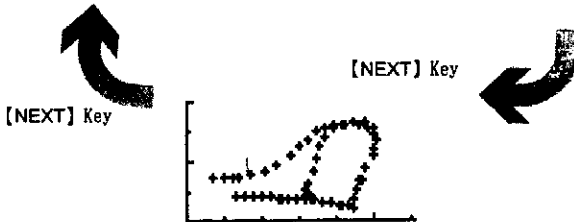

It is possible to freeze the 2-D Trace Mode. The horizontal value will be engine RPM while the vertical value will be the selected data parameter.

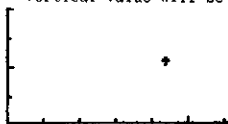

During HOLD  
【◀】 left Key



HOLD Release

### 1 《HOLD Setting》

※During 1 point, 10 point, ghost map tracing modes.

【◀】 left Key


Use this key to freeze the graph display

### 2 《HOLD Release》

※ During HOLD

【◀】 left Key

Use this key to release the HOLD function

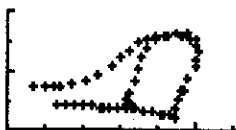

【▶】 right Key



### 1 《Clearing Ghost Map Trace》

※During Ghost Map Trace

【▶】 right Key

Use this key to clear the ghost map trace


## ■ setting 《Setting Mode》

### ③ Setting Mode **[setting]**

Choosing the **[setting]** key will initiate the SETTING MODE.

### ● Setting Mode Data Parameters

- ③-a [Hi-Thrt1] .....Air Flow % Correction Setting (During High Throttle)
- ③-b [Lo-Thrt1] .....Air Flow % Correction Setting (During Low Throttle)
- ③-c [TH-Point] .....Setting the HI/ LO Throttle position values
- ③-d [Ne-POINT] .....Air Flow Correction RPM Setting values
- ③-e [Dec.-Air] .....Deceleration Air Setting for Upper Limits???

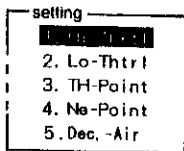

#### 1 《Setting Parameter Selection》

**[▲]** up Key / **[▼]** down Key

Use these keys to select a desired parameter.  
The selected parameter will illuminate.

#### 2 《Setting Parameter Entry》

**[NEXT]** Key


Use this key to finalize selection  
The menu will proceed

#### 3 《Ending Setting Parameter》

**[PREV.]** Key

Use this key to exit this Mode  
If the PREV Key is depressed AFTER the Setting Parameter Entry Mode,  
The screen will return to the Setting Parameter Selection Screen.  
If the PREV Key is depressed DURING the Setting Parameter Selection  
Mode, The screen will return to the MAIN MENU.

※ **[PREV.]** Use this key to go BACK one menu

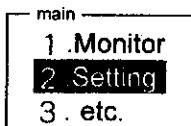

Pressing the **[NEXT]** Key and **[PREV.]** Key for over 0.5 sec. will  
toggle between **Monitor Mode** and **Setting Mode**.

## ■ WARNING

- Tuning should only be performed by an experienced professional.  
Improper tuning WILL damage the engine.
- Do not operate this unit while driving.  
Operating this unit while driving may interfere with normal driving procedure and be the cause of accidents.

## ■setting 《Hi-Thrtl》 《Lo-Thrtl》

### ③-a Air Flow % Correction Setting (HI Throttle)

**【setting】** → **【Hi-Thrtl】**

### ③-b Air Flow % Correction Setting (LO Throttle)

**【setting】** → **【Lo-Thrtl】**

This unit takes the input air flow signal and converts the signal into an air volume value. This value is modified through the Air Flow % Correction Setting. The modified output air volume value is then converted back into an air flow signal and sent to the ECU ( Electronic Control Unit)

For instance, if the setting value is set at +10%, then the ECU ( Electronic Control Unit)will recognize a +10% increase in air volume thereby increasing the fuel amount by a theoretical +10%.

The Air Flow % Correction Setting may be modified at 8 different engine RPM levels. Adjustments can also be made for HI throttle/ LO throttle situations.


※HI/LO Throttle setting is explained in section ③-c.

#### 1 《Engine RPM Selection》

**【◀】** left Key / **【▶】** right Key

Use these keys to select a desired engine RPM  
The selected RPM range will illuminate

※Please refer to section ③-d to change the setting points.

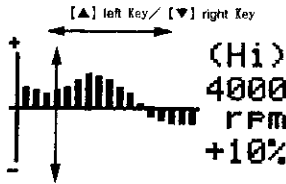

#### 2 《Increasing/Decreasing the Setting Value》

**【▲】** up Key / **【▼】** down Key


Use the keys above to change the setting value

The Setting Range is - 50 % - +50 %

Adjustments may be made in 1 % increments

Once the **【Hi-Thrtl】** is set, proceed with the **【Lo-Thrtl】** setting.


**【NEXT】** Key **【Hi-Thrtl】** **【Lo-Thrtl】** Change

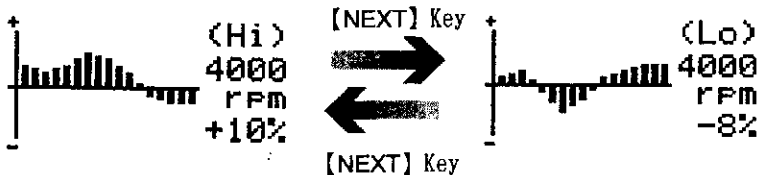

## ■ setting 《Hi-Thrtl》 《Lo-Thrtl》


If the Engine RPM falls BETWEEN the designated setting point, a point between the 2 closest setting points will be automatically selected.

Selected Correction Point

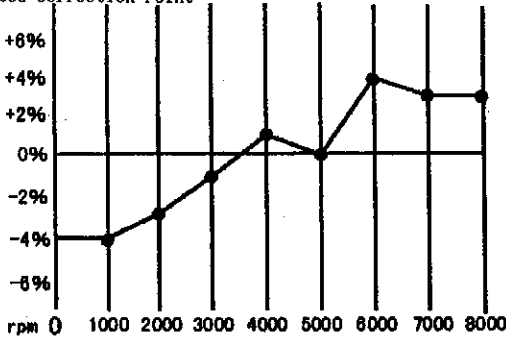

### ③-c HI/LO Throttle Setting

**[setting] → [TH-Point]**

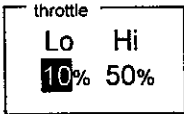

1 《Lo - Hi Selection》

【◀】 left Key / 【▼】 right Key

Use these keys to select HI/LO throttle position



【◀】 left Key




【▼】 right Key

2 《Throttle Position Setting》

【▲】 up Key / 【▼】 down Key

Use these keys to select throttle position

※Setting range is from 0%~100% in 1% increments

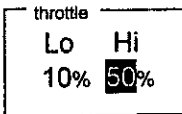

## ■ setting 《Th-Point》

If the Throttle Position Setting is set like below, the Air Flow Correction will be as follows.


throttle	
Lo	Hi
10%	50%

Ex.

- If the Throttle Position is above 50% and the Hi-Thrt correction value is +3%
- If the Throttle Position is below 10% and the Lo-Thrt correction value is -1%

Throttle Position is at 40%

Selected Correction Point

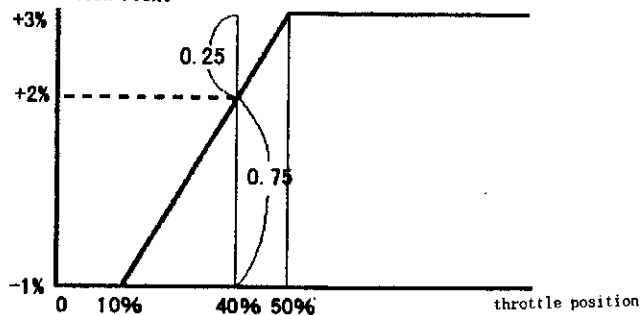

- If the Throttle Position is set at 40%

$$\frac{(3\% - (-1\%)) \times (40\% - 10\%)}{50\% - 10\%} + (-1\%) = 2\%$$

Then the calculation above will display Correction Value



## ■ setting 《Ne-Point》

③-d Setting Air Flow % Correction Point      **[setting]** → **[Ne-Point]**

Ne point	
Ne1	: 1 0 0 0 rpm
Ne2	: 2 0 0 0 rpm
Ne3	: 3 0 0 0 rpm
Ne4	: 4 0 0 0 rpm
Ne5	: 5 0 0 0 rpm
Ne6	: 6 0 0 0 rpm
Ne7	: 7 0 0 0 rpm
Ne8	: 8 0 0 0 rpm

### 1 《Engine RPM Selection》

**【▲】** up Key / **【▼】** down Key

Use the keys above to select RPM Channel  
The selected Channel will illuminate

### 2 《Channel Entry》

**【▶】** right Key

Use this key to select the appropriate RPM  
The selected engine RPM will illuminate

### 3 《Changing Engine RPM》

**【▲】** up Key / **【▼】** down Key

Use the keys above to select engine RPM

※Upper Limit 9 0 0 0 rpm

Lower Limit 1 0 0 0 rpm

Increments 5 0 0 rpm

Ne point	
Ne1	: <span style="background-color: black; color: black;">          </span> rpm
Ne2	: 2 0 0 0 rpm
Ne3	: 3 0 0 0 rpm
Ne4	: 4 0 0 0 rpm
Ne5	: 5 0 0 0 rpm
Ne6	: 6 0 0 0 rpm
Ne7	: 7 0 0 0 rpm
Ne8	: 8 0 0 0 rpm

※Ne : Engine RPM

**Ne1 < Ne2 < Ne3 < Ne4 < Ne5 < Ne6 < Ne7 < Ne8**

## ■ setting 《Dec.-Air》

### ③-e Setting Deceleration Air Flow Correction **【setting】** → **【Dec.-Air】**

Some vehicles equipped with hot-wire air flow meters with forced induction units and may experience engine stalling when the throttle is let off. This can be caused by a blow off valve releasing into the atmosphere, lack of a blow off valve, or the use of a very large turbocharger. By using the Dec.-Air function, the unit can prevent the tendencies for engine stall.

Specs : When below the Thr throttle position level, Ne1 · Ne2 (applicable to Ne1 · Ne2 of **【Ne-Point】**)

The upper limit to the air flow output voltage is applied according to specified engine RPM

dec. air	
Thr	**** %
Ne1	2. 5 %
Ne2	1. 8 %

#### 1 《Channel Selection》

**【▲】** up Key / **【▼】** down Key

Use the keys above to select

The selected channel will illuminate

#### Air Flow usage upper limit value 2 《Channel Entry》

dec. air	
Thr	██████ %
Ne1	2. 5 %
Ne2	1. 8 %

**【▶】** right Key

use this key to enter desired selection

Selected entry will illuminate

#### 3 《Throttle Position Setting》

**【▲】** up Key / **【▼】** down Key

Use the keys above to select Throttle Position Setting Setting

dec. air	
Thr	**** %
Ne1	██████ %
Ne2	1. 8 %

#### 4 《Air Flow Upper Limit Setting》

**【▲】** up Key / **【▼】** down Key

Use the above keys to select Air Flow Upper Limit Setting

● Engines revving higher than the Ne2 point will not have deceleration correction

● When the Thr reads \*\*\*\* the deceleration parameter is not functional

#### **advice** SETTING TIPS!!

**Thr Setting** : While the engine is cold and the transmission is in neutral, set the unit to a point LOWER than the throttle position Ne2 point can control.

**Ne1·Ne2 Setting** : While the engine is cold and the transmission is in neutral, set the unit to a point LOWER than the air flow % usage a value that the Ne1/Ne2 engine RPM can control.


## ■etc. 《Misc.》

### ④Misc. 【etc.】

Selecting 【etc.】 on the Main Menu will access the Misc. Mode Menu.

### ●Misc. Menu

- ④-a [Sensor Type] .....Sensor Type Setting
- ④-b [Car Select] .....Engine Cylinder #, Throttle Type Setting
- ④-c [Grph Scale] .....Graph Scale Setting
- ④-d [Sensor Chk] .....Input Signal Check
- ④-e [VFD Bright] .....Screen Brightness
- ④-f [Initialize] .....Restore to Default Settings

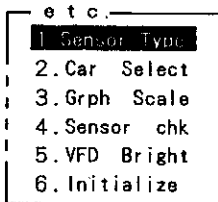

#### 1 《Misc. Parameter Selection》

【▲】 up Key / 【▼】 down Key

Use the keys above to select  
The selected menu will illuminate

#### 2 《Misc. Parameter Entry》


【NEXT】 Key

Use this key to finalize entry selection  
The selected entry will illuminate

#### 3 《Ending Misc. Parameter Setting》

【PREV.】 Key

use this key to exit this Mode  
Pressing this key after Misc. Menu Entry  
Will return to the Menu Selection Screen  
Pressing this key after the Misc. Menu Screen  
Will return to the Main Menu

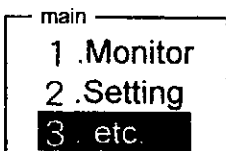

※ 【PREV.】 will go back one screen


■ etc. 《Setting Sensor Type》

④-a Setting Sensor Type [etc.] → [Sensor Type]

Procedures for Sensor Type Setting


[etc.] → [Sensor Type] selecting this will access the following screen menu

※Please use the tables on Page 28 to select Sensor Type

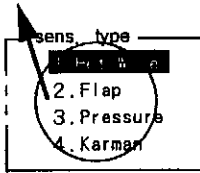


1 《Sensor Type Selection》

[▲] up Key / [▼] down Key  
Use the keys above to select Sensor type  
The selected sensor will illuminate



2 《Sensor Type Entry》

[NEXT] Key  
Use this key to finalize entry

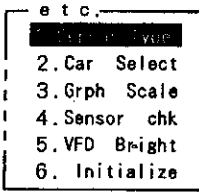


3 《Ending Sensor Type Selection》

[PREV.] Key  
Use this key to exit sensor type selection  
If this key is pressed during the Sensor Type Selection Screen  
The [PREV.] key will access the Main Menu

If Selecting [1. Hot-Wire]



If Selecting [3. Pressure]

※Please refer to the table on page 28 for Sensor Numbers

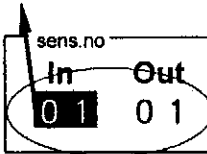

1 《Sensor Number Selection》

[▲] up Key / [▼] down Key  
Use the keys above to select the vehicle specific Sensor Number  
The Active screen will illuminate

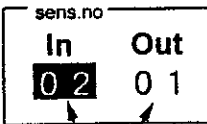


Sensor Number


■ etc. 《Sensor Type Setting》

※Skyline GT-R(Twin Airflow) Modification

※Fairlady Z (300ZX)(Z32)Twin Air Flow Modification

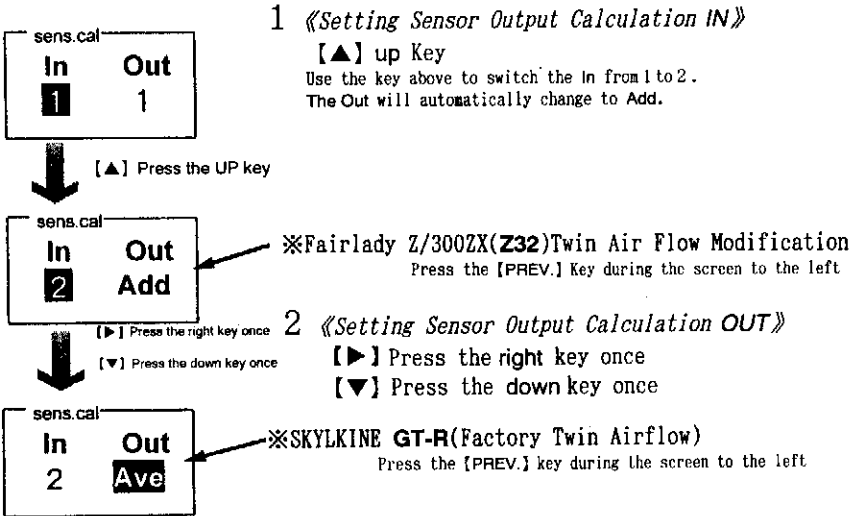


※SKYLINE GT-R Single Air Flow Conversion

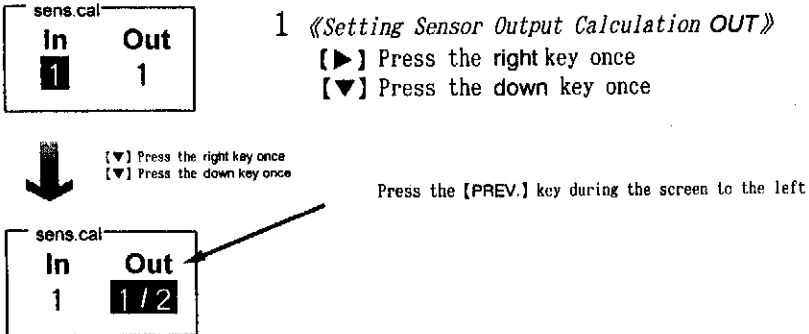


## ■ etc. 《Sensor Type Setting》

※Skyline GT-R(Twin Airflow) Modification

※Fairlady Z (300ZX)(Z32)Twin Air Flow Modification

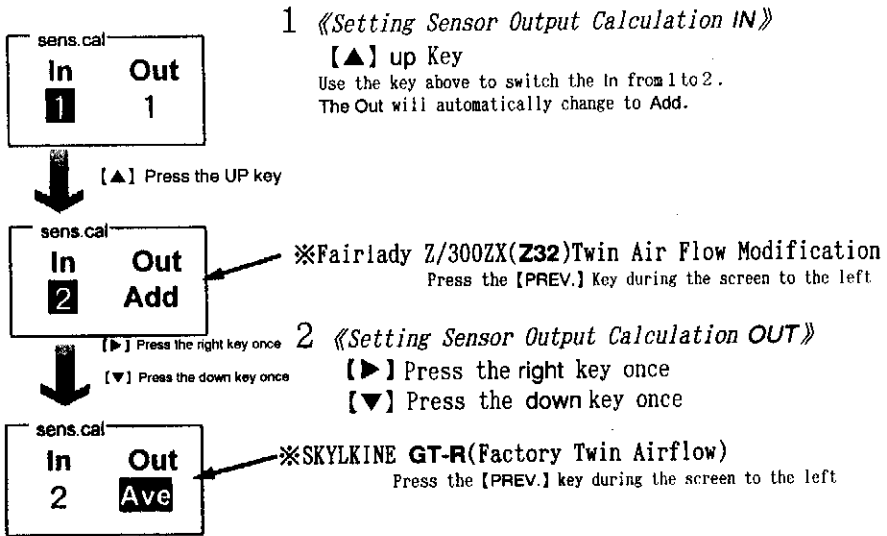


※SKYLINE GT-R Single Air Flow Conversion

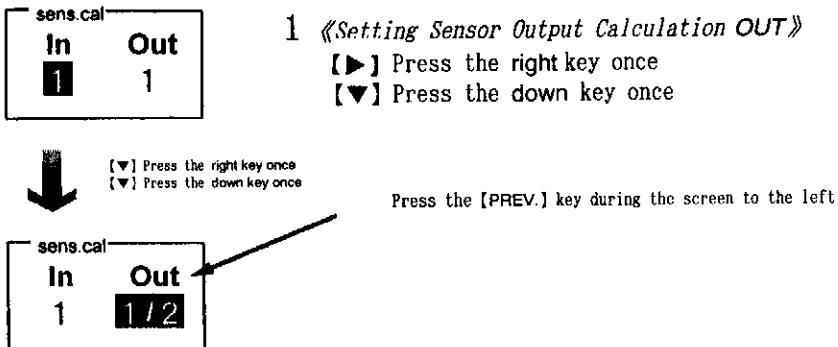

## ■etc. 《Setting Sensor Type》

### If Selecting [2. Flap]

※Please refer to the table on page 28 for Sensor Numbers

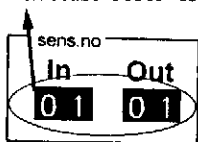


#### 1 《Sensor Number Selection》

【▲】 up Key / 【▼】 down Key

Use the keys above to select the vehicle specific Sensor Number  
The Active screen will illuminate



【▼】 down Key




Sensor Number

#### 2 《Sensor Number Entry》

Press the 【PREV.】 Key

### If Selecting [4. Karman]

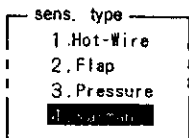

#### 1 《Sensor Type Entry》

【▼】 down Key

Select 4. Karman and press the  
【PREV.】 Key

※There is no sensor number entry

## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## TOYOTA

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type	
CELSIOR	UCF10	1UZ-FE	'92.9~'94.9		KR	
			'89.11~'92.8			
CROWN	JZS14#	2JZ-GE	'91.10~'95.7		PR-3	
CROWN MAJESTA	UZS141	1UZ-FE	'91.10~'95.7		KR	
ARISTO	JZS161	2JZ-GTE	'97.8~*		HW-13	
	JZS160	2JZ-GE				
	JZS147	2JZ-GTE	'91.10~'97.7		PR-1	
		2JZ-GE			PR-3	
	UZS143	1UZ-FE	'92.10~'97.7		KR	
SOARER	JZZ30	1JZ-GTE	'96.8~*		HW-12	
			'91.5~'96.7		PR-1	
	JZZ31	2JZ-GE	'94.1~'96.7		PR-3	
	UZZ31	1UZ-FE	'91.5~'93.12		KR	
	MZ20	7M-GTE	'88.1~'91.4		KR	
			'86.1~'87.12			
	GZ20	1G-GTE	'88.1~'91.4		FL-1	
			'86.1~'87.12			
1G-GE		'89.1~'91.4		PR-3		
		'86.1~'88.12				
SUPRA	JZA80	2JZ-GTE	'97.8~*		HW-13	
		2JZ-GE	'93.5~'97.7		PR-1	
	JZA70	1JZ-GTE	'90.8~'93.4		PR-3	
	MA70	7M-GTE	'88.9~'90.7		KR	
			'86.2~'88.8			
	GA70	1G-GTE	'88.8	Turbo A	PR-1	
			'88.9~'93.4		FL-1	
		1G-GE	'86.2~'88.8		PR-3	
'88.9~'93.4						
MARK II CRESTA CHASER	JZX100	1JZ-GTE	'96.9~*		HW-12	
	JZX90		'94.9~'96.8		PR-1	
			'92.10~'94.8		PR-3	
	JZX91	2JZ-GE	'92.10~'96.8		PR-3	
			'94.9~'96.8			
	JZX81	1JZ-GTE	'92.10~'94.8		PR-3	
			'90.8~'92.9			
	GX81	1G-GTE	'88.8~'92.9		FL-1	
1G-GE			'88.8~'92.9		PR-3	
MR2		SW20 III ~ V	3S-GTE	'93.10~*		PR-2
		SW20 III, IV	3S-GE	'93.10~'97.11		PR-3
SW20 I, II	3S-GTE	'89.10~'93.9		FL-2		
		3S-GE		PR-3		
	AW11	4A-GZE	'86.8~'89.9		FL-3	
4A-GE		'84.6~'89.9		PR-3		

- Be sure to double check for proper vehicle application and installation.  
Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.



## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## TOYOTA

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type			
CELICA	ST205	3S-GTE	'94.2~*		PR-2			
		3S-GE	'93.10~'97.11					
	ST202 ST203	3S-FE		'96.6~*	M/T	PR-3		
					A/T			
				'95.8~'96.5	M/T			
					A/T			
	ST185 ST182 ST165 ST162	3S-GTE		'91.9~'93.9		FL-2		
				'89.10~'91.8				
3S-GE			'89.10~'93.9		PR-3			
3S-GTE			'85.8~'89.9		FL-2			
3S-GE								
		3S-GE		'94.1~'98.7				
CURREN	ST206 ST207	3S-FE		M/T	PR-3			
				A/T				
				M/T				
				W/A/T·TRC W/O·A/T·TRC				
				'94.1~'95.9		W·TRC W/O·TRC		
CARINA ED CORONA EXIV	ST202 ST203	3S-GE	'93.10~'98.4		PR-3			
		3S-FE		'96.6~'98.4		M/T		
						A/T		
						M/T		
				'95.8~'96.5		W·A/T·TRC W/O·A/T·TRC		
						W·TRC W/O·TRC		
				'93.10~'95.7				
CALDINA	ST215W	3S-GTE	'97.8~*		PR-2			
	ST215G	3S-FE						
	ST210G							
	ST195G	3S-GE		'95.2~'97.7				
	ST195G ST191G	3S-FE		'96.1~'97.7	M/T 2WD·A/T 4WD·A/T W·FF·TRC W/O·FF·TRC	PR-3		
				'94.2~'95.12	4WD·M/T 4WD·A/T FF·A/T			
				'92.11~'94.1	4WD·M/T 4WD·A/T			
				'92.11~'97.7	M/T A/T			
			ST190G	4S-FE				
COROLLA SPRINTER			AE111	4A-GE	'95.5~*			PR-3
	4A-FE							
	5A-FE							
	AE101	4A-GE	'91.6~'95.4	M/T	FL-4			
				A/T				
		4A-FE		M/T A/T	PR-3			
	AE92	4A-GE		'89.5~'91.5		PR-3		
				'87.5~'89.4				

● Be sure to double check for proper vehicle application and installation.

Installation of the Super-AFC on a non-listed vehicle may lead to severe engine damage.

## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## TOYOTA

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
COROLLA LEVIN SPRINTER TRUENO	AE111	4A-GE	'95.5~*		PR-3
		4A-FE			
		5A-FE			
	AE101	4A-GZE	'91.6~'95.4		PR-1
		4A-GE		M/T	FL-4
				A/T	
		4A-FE		M/T	PR-3
				A/T	
	AE92	4A-GZE	'89.5~'91.5		PR-1
			'87.5~'89.4		FL-3
4A-GE		'89.5~'91.5		PR-3	
	'87.5~'89.4				
AE86	4A-GE	'83.5~'87.4		PR-3	
COROLLA CERES SPRINTER MARINO	AE101	4A-GE	'92.5~'95.4	M/T	FL-4
				A/T	
	4A-FE	M/T		PR-3	
			A/T		
COROLLA FX	AE101	4A-GE	'92.5~'95.4	M/T	FL-4
				A/T	
	4A-FE	M/T		PR-3	
		A/T			
AE92	4A-GE	'89.5~'92.4		PR-3	
		'87.5~'89.4			
STARLET	EP91	4E-FTE	'95.12~*		PR-1
		4E-FE			PR-3
	EP82	4E-FTE	'89.12~'95.11	M/T	PR-1
			'92.1~'95.11	A/T	
			'89.12~'91.12		
	EP71	4E-FE	89.12~'95.11		PR-3
		2E-TE	'86.1~'89.12		PR-1
		2E-E			PR-3
RAV4	SXA1#G	3S-FE	'97.9~*	M/T	PR-3
				A/T	
	SXA11W	3S-GE	'96.8~*		
	SXA10W				
	SXA11G	3S-FE	'95.4~'97.8	M/T	
	A/T				
SXA10G	'94.5~'97.8			M/T	
			A/T		

- Be sure to double check for proper vehicle application and installation.  
Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## NISSAN

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
PRESIDENT	G50	VH45DE	'90.10~*		HW-1
INFINITY Q45	G50	VH45DE	'89.11~'97.9		HW-1
CIMA III	FGY33	VH41DE	'96.6~*		HW-1
	FHY33	VQ30DET			HW-4
CIMA II	FGY32	VH41DE	'91.8~'96.5		HW-1
	FPY31	VG30DET	'93.9~'96.5		HW-4
CIMA I	FPY31	VG30DET	'89.8~'91.7		HW-4
		VG30DE			
		VG30DET	'88.1~'89.7		
		VG30DE			
FAIRLADY Z	Z32	VG30DETT	'89.7~*		HW-2
		VG30DE			
LEOPARD	Y33	VQ30DET	'96.3~*		HW-4
		VQ30DE			
	UF31	VG30DET	'88.8~'92.5		
	GF31	VG30DE			
		VG20DET			
LEOPARD J FERRY	JGBY32	VH41DE	'92.6~'96.2		HW-1
	JPY32	VG30DE	'92.6~'96.2		HW-4
CEDRIC GLORIA	Y33	VQ30DET	'95.6~*		HW-4
		VQ30DE			
	Y32	VG30DET	'91.6~'95.5		
		VG30DE			
	Y31	VG20DET	'89.6~'91.5		
VG20E					
CEFIRO	A32	VQ30DE	'97.1~*		HW-4
		VQ25DE			
		VQ20DE			
		VQ30DE	'94.8~'96.12		
		VQ25DE			
	A31	VQ20DE			
		RB20DET	'88.9~'94.7		
		RB25DE	'92.5~'94.7		
		RB20DE	'88.9~'94.7		
CEFIRO WAGON	W#A32	VQ30DE	'97.1~*		HW-4
		VQ25DE			
		VQ20DE			
LAUREL	C35	RB25DET	'97.6~*		HW-4
		RB25DE			
		RB20DE			
	C34	RB25DET	'94.1~'97.5		
		RB25DE	'93.1~'97.5		
		RB20DE			
	C33	RB20DET	'89.1~'92.12		
RB20DE					
SKYLINE	R34	RB25DET	'98.5~*		HW-4
		RB26DETT	'95.1~*		HW-3
	R33	RB25DET	'96.1~'98.4		HW-4
		RB25DE			
		RB25DET	'93.8~'95.12		
		RB25DE			

- Be sure to double check for proper vehicle application and installation.

Installation of the Super-AFC on a non-listed vehicle may lead to severe engine damage.

## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## NISSAN

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
SKYLINE	R32	RB26DETT	'89.8~'94.12		HW-3
		RB25DE	'91.8~'93.7		
		RB20DET	'89.5~'93.7		HW-4
		RB20DE			
	R31	RB20ET	'87.8~'89.5		
		RB20E			
STAGEA	W#C34	RB25DET RB25DE	'96.8~*		HW-4
STAGEA Autach Ver. 260RS	WGNC34	RB26DETT	'97.10~*		HW-3
BLUE BIRD	U14	SR20VE	'97.9~*		HW-14
		SR20DE	'96.1~*		HW-6
		SR18DE			
	U13	SR20DET	'91.9~'95.12		HW-6
		SR20DE			
		SR18DE			
	U12	SR20DET	'89.10~'91.8		HW-6
		SR20DE			
		CA18DET	'87.9~'89.9		HW-7
		CA18DE			
SILVIA	S14	SR20DET	'96.6~*		HW-5
			'93.10~'96.5		
		SR20DE	'93.10~*		HW-6
	PS13	SR20DET	'91.1~'93.9		HW-6
		SR20DE			
	S13	CA18DET	'88.5~'91.1		HW-7
CA18DE					
180SX	RPS13	SR20DET	'96.8~*		HW-6
		SR20DE			
		SR20DET		'91.1~'96.7	
	RS13	CA18DET	'89.3~'90.12		HW-7
PULSAR	N15	SR18DE	'95.1~*		HW-6
		SR16VE	'97.9~*		HW-14
	N14	SR20DET	'90.8~'94.12		HW-5
		SR18DE			HW-6
PRIMERA	P11	SR20VE	'97.9~*		HW-14
		SR20DE	'95.9~*		HW-6
		SR18DE			
	P10	SR20DE	'90.2~'95.8		HW-6
		SR18DE	'92.9~'95.8		
PRIMERA WAGON	W#P11	SR20VE	'97.9~*		HW-14
		SR20DE	'97.9~*		HW-6
		SR18DE			
AVENEIR	W11	SR20DET	'98.8~*		HW-5
		SR20DE			HW-6
	W10	SR20DET	'95.8~'98.7		HW-5
		SR20DE	'90.5~'98.7		HW-6
		SR18DE	'93.1~'98.7		

- Be sure to double check for proper vehicle application and installation.  
Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.

## Sensor Type Glossary

Ex.                    PR-3  
                           Sensor Type    Sensor Number

HW-HotWire  
 FL-Flap  
 PR-Pressure  
 KR-Karman

## NISSAN

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
SUNNY	B14	SR18DE	'94.1~'98.9		HW-6
	B13		'90.1~'93.12		
NX COUPE	B13	SR18DE	'90.1~'93.12		HW-6
MARCH	K11	CG13DE	'92.1~*		HW-9
		CG10DE			
CUBE	Z10	CG13DE	'98.2~*		HW-9
TERRANO	YD21	VG30E	'89.10~'95.8		HW-6

## MITSUBISHI

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
DIAMANTE	F36A	6G72	'95.1~*	MIVEC	PR-5
	F17A			DOHC	KR
GTO	Z16A	6G72	'90.10~*		KR
FTO	DE3A	6A12	'94.10~*	MIVEC	PR-5
			'96.2~*		KR
	DE2A	4G93	'94.10~'96.1		KR
LEGNUM	EC5W	6A13	'96.8~*	DOHC	KR
GALANT	EC5A	6A13	'96.8~*		KR
	E84A	6A12	'92.5~'96.7	DOHC	
	E39A	4G63	'87.10~'92.4	DOHC	
ECLIPSE	D32A	4G63	'95.6~*		KR
	D27A		'89.11~'95.6		
LANCER	CK4A	4G92	'95.10~*	MIVEC	PR-5
	CM5A	4G93			
	CD5A		'91.10~'95.9		KR
	CP9A	'98.1~*			
	CN9A	4G63	'96.8~'97.12		
	CE9A	'93.10~'96.7			
	CD9A	'92.10~'93.9			
LIBERO	CD5W	4G93	'92.5~*		KR
MIRAGE	GM5A	4G93	'95.10~*		KR
	CJ4A	4G92			MIVEC
	CA4A		'91.10~'95.9	MIVEC	
PAJERO	V25W	6G74	'93.7~*		KR
	V23W	6G72	'91.1~*		
RVR	N74W	4G64	'97.10~*		KR
	N73W	4G63		M/T	
	N71W	4G93		A/T	
	N61W				
	N23W			4G63	

- Be sure to double check for proper vehicle application and installation.  
 Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.

## Sensor Type Glossary

Ex.            PR-3  
 Sensor Type    Sensor Number

HW-HotWire  
 FL-Flap  
 PR-Pressure  
 KR-Karman

## HONDA

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
NSX	NA2	C32B	'97.2~*		PR-6
	NA1	C30A	'95.3~*		
			'90.9~'95.2		
LEGEND	KA9	C35A	'86.2~*		
	KA8	C32A	'90.12~'96.1		
	KA7		'90.10~'96.1		
INSPIRE	UA5	J32A	'98.10~*		
	UA4	J25A			
	UA2	G25A	'95.2~'98.9		
	UA1	G20A			
	CG2	G25A	'92.1~'95.1		
PRELUDE	CB5	G20A	'89.10~'91.12		
	BB6	H22A	'96.12~*		
	BB8				
	BB1		'91.9~'96.11	W-TRC	
BB4	WO-TRC				
ACCORD	CF3	F18B	'97.9~*		
	CF4	F20B			
	CD5	F22B	'93.9~'97.8		
	CD6	H22A			
ACCORD WAGON	CF6	F20B	'97.10~*		
	CE1	F22B	'94.3~'97.9		
	CB9	F22A	'91.3~'94.2		
INTEGRA (Including '98 Spec.)	DC2	B18C	'95.9~*	M/T	
	DB8		'93.5~'95.8	A/T	
CIVIC	DA6	B16A	'89.4~'93.5		
	EK9	B16B	'98.9~*		
	EK4	B16A			
	EK3	D15B	'97.6~'98.8		
	EK9	B16B			
	EK4	B16A	'95.9~'98.8		
	EK3	D15B			
	EG6	B16A	'91.9~'95.8		
	EG4	D15B			
	CR-X	EF9	B16A	'89.9~'91.8	
EG2		B16A	'92.3~'95.10		
CR-V	EG1	D15B	'89.9~'92.2		
	EF8	B16A			
	RD1	B20B	'95.10~*		
ODYSSEY	RA3	F23A	'97.10~*		
	RA4				
	RA5	J30A			
	RA1	F22B	'94.10~'97.9		
	RA2				
S-MX	RH1	B20B	'96.11~*		
STEP WGN	RF1	B20B	'96.5~*		
	RF2				
LIFE	JA4	E07A	'97.4~*		
CAPA	GA4	P15A	'98.4~*		

● Be sure to double check for proper vehicle application and installation.

Installation of the Super-AFC on a non-listed vehicle may lead to severe engine damage.

## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW-HotWire  
FL-Flap  
PR-Pressure  
KR-Karman

## MAZDA

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
EUNOS COSMO	JC3S	20B-REW	'94.3~'95.8		FL-6
	JC3SE		'90.3~'94.3		
	JCES	13B-REW	'94.3~'95.8		
	JCESE		'90.3~'94.3		
RX-7	FD3S	13B-REW	'95.12~*		PR-4
			'91.12~'95.11		
	FC3S	13B	'88.9~'91.11		FL-6
ROADSTAR	NA8C	BP-ZE	'85.19~'88.8		FL-5
			'95.8~'97.12		HW-11
	NA6CE	B6-ZE	'93.8~'95.7		
			'89.9~'93.7	M/T A/T	FL-8
FAMILIA	BG8Z	BP-ZET	'89.8~'94.3		FL-7
AZ-WAGON	MD21S	K6A T/C	'98.10~*		PR-8
	MD11S	F6A T/C			

## SUBARU

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type	
LEGACY	BH5	EJ208	'98.6~*		HW-1	
		EJ206				
	BD5 BG5	EJ20R	'96.6~'98.5			HW-4
		EJ20H				
		EJ20D				
		EJ20H				
		EJ20D				
		EJ20H				
	BD9 BG9	EJ25D	'93.10~'96.5			
			'96.6~'98.5			
BF5	EJ20G	'94.10~'96.9			HW-10	
		'89.2~'93.9				
IMPREZA	GC8 GF8	EJ207	'98.9~*		HW-1	
		EJ205				
	GC8	EJ20K	'96.9~'98.8			
	GF8					
	GC8	EJ20G	'92.11~'96.8		HW-10	
GF8	'96.9~'98.8			HW-4		
FORESTER	SF5	EJ20G	'93.10~'96.8		HW-10	
			'98.9~*		HW-1	
			'97.2~'98.8		HW-4	

## ISUZU

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
BIG HORN	UBS25	6VD1	'91.12~*		PR-7

- Be sure to double check for proper vehicle application and installation.  
Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.

## Sensor Type Glossary

Ex. PR-3  
Sensor Type Sensor Number

HW—HotWire  
FL—Flap  
PR—Pressure  
KR—Karman

## SUZUKI

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
ALTO WORKS	HA22S	K6A T/C	'98.10~*		PR-8
	HA12S	F6A T/C			
	HA21S	K6A T/C	'94.11~'97.4		
	HB21S				
	HA11S	F6A T/C		M/T	
	HB11S			A/T	
CAPUCHINO	EA21R	K6A	'95.5~'98.6		
	EA11R	F6A	'91.11~'95.10		
WAGON-R	MC21S	K6A T/C	'98.10~*		
	MC11S	F6A T/C			
	CT51S	K6A T/C	'97.4~'98.9		
	CV51S				
	CT21S	F6A T/C	'95.11~'98.9	M/T	
				A/T	
CV21S	F6A T/C	'93.9~'95.10	M/T		
			A/T		
WAGON-R WIDE	MA61S	K10A T/C	'97.2~*		
	MB61S				
KEI	HN21S	K6A T/C	'98.10~*		
	HN11S	F6A T/C			
GIMNY	JB23W	K6A T/C	'98.10~*		

## DAIHATSU

Vehicle Name	Model Type	Engine	Year	Note	Sensor Type
MIRA TR-XX	L502S	JB-JL	'94.9~'98.9		PR-8
	L512S				
MOVE	L602S	JB-JL	'95.8~'98.9		


- Be sure to double check for proper vehicle application and installation.  
Installation of the Super-AFC on a non-listed vehicle may lead to sever engine damage.



## ■etc. 《Setting Cylinder/Throttle Sensor Type》


### ④-b Setting Cylinder/Throttle Sensor Type

**【etc.】 → 【Car Select】**

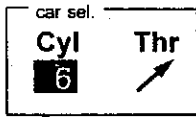

▶ right Key

◀ left Key



#### 1 《Setting Cylinder Type》

▲ up Key / ▼ down Key

Use this key to select cylinder type

Setting range is from 1 ~ 16 cylinders

※Please select the # of rotors × 2 for rotary vehicles


※Please select 4 for Toyota V-8 engines

#### 2 《Switching Between Cyl · Thr》

◀ left Key / ▶ right Key


Use the keys above to switch between cylinder setting and throttle sensor type

The active menu will illuminate



▼ down Key

▲ up Key



#### 3 《Throttle Sensor Type Setting》

Use the ▲ up Key / ▼ down Key to select

• • • During Closed Throttle 0V ~ 1V  
During Open Throttle 3V ~ 5V

• • • During Closed Throttle 3V ~ 5V  
During Open Throttle 0V ~ 1V

\*\* • • • When there is NO throttle signal

※Be sure to set the throttle sensor type AFTER performing the

④-d 《Sensor Voltage Check》 for Open and Closed Throttle voltage.

## ■etc. 《Setting Graph Scale》

### ④-c Setting Graph Scale [etc.] → [Grph Scale]

This will set the Monitor Mode Graph display, Analog Meter display, 2-D trace Mode

grph scl	
Pr:	760mmHg
Ne:	6000rpm
Cr:	± 3 %

#### 1 《Setting Parameter Selection》

【▲】 up Key / 【▼】 down Key

Use the keys above to select desired parameter  
The selected parameter will illuminate

grph scl	
Pr:	600mmHg
Ne:	6000rpm
Cr:	± 3 %

#### 2 《Setting Parameter Entry》

※After Setting Parameter Entry

【▶】 right Key

Use this key to finalize selection  
The selected parameter will illuminate  
Also,

【▲】 up key / 【▼】 down Key

Use the keys above to change selection

#### Setting Range

Pr : Intake Pressure    -760mmHg~0mmHg  
                              -760mmHg~+1.0kg/cm<sup>2</sup>  
                              -760mmHg~+2.0kg/cm<sup>2</sup>

Ne : Engine RPM        Orpm~6000rpm  
                              Orpm~7000rpm  
                              Orpm~8000rpm  
                              Orpm~9000rpm  
                              Orpm~10000rpm

Cr : Air Flow % Correction    ±3% : ±6% : ±9% : ±15%  
  ±30%

e t c.	
1.	Sensor Type
2.	Car Select
3.	Grph Scale
4.	Sensor chk
5.	VFD Bright
6.	Initialize

#### 3 《Ending Setting》

【PREV.】 Key

Use this key to finalize, save settings and return to the previous mode

## ■etc. 《Checking Sensor Voltage》

### ④-d Checking Sensor Voltage [etc.] → [Sensor chk]

This mode checks the sensor voltage of the air flow sensor, pressure sensor, and throttle sensor. This also allows a double-checking parameter to ensure proper wiring connection. This mode is also necessary to perform the throttle sensor type setting in section ④-b

Please refer to section ④-b for more information

sens.check	
In-1:	1.234V
In-2:	1.254V
Thrt:	4.075V

In-1: Air Flow Sensor Voltage 1  
 Pressure Sensor Voltage  
 In-2: Air Flow Sensor Voltage 2  
 (For Twin Air Flow)  
 Thrt: Throttle Sensor Voltage

### ④-e Setting Display Brightness [etc.] → [VFD Bright]

Allows adjustment of the VFD (Vacuum Fluorescent Display)

VFD bright		
Day	Dim	Nig
90	50	10

#### 1 《Setting Parameter Selection》

【◀】 left Key / 【▶】 right Key

Use the keys above to select

The selected number will illuminate

#### 2 《Changing the Setting Parameter》

【▲】 up key / 【▼】 down Key

Use the keys above to change the setting value

Day : If Bright

Dim : If Dim

Nig : If Dark

VFD bright		
Day	Dim	Nig
90	49	10

#### 3 《Ending Setting》

【PREV.】 Key


Use this key to finalize, save settings and return to the previous mode

e t c .	
1. Sensor Type	
2. Car Select	
3. Grph Scale	
4. Sensor chk	
5. VFD Bright	
6. Initialize	

## ■etc. 《Restore Default Settings》

### ④-e Restore Default Settings **【etc.】** → **【Initialize】**

This will restore ALL data to factory specification settings

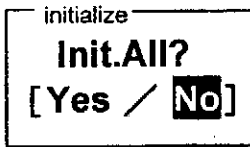

#### 1 《Default Setting Selection》

**【◀】** left Key

Select [Yes]


#### 2 《Initializing Default Settings》

**【NEXT】** Key

This will initiate the process

Turn the Ignition Key OFF→ON

To complete initialization

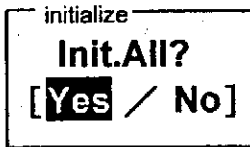

# ■ Installation

## ● SUPER AFC Installation

### 1 Disconnect the negative (-) terminal of the battery

**Advice!**

Some desired information as car audio settings, car navigation settings, and other battery back up data may be lost during this process. Please make a note of all pertinent data before proceeding.

### ▲ CAUTION

- Be sure to disconnect the negative terminal of the battery before proceeding with installation. Failure to do so may result in electrical shorts, electrical fires, and other vehicle damage.
- Any damage to the vehicle or related parts caused by faulty installation is not the responsibility of APEX Co. LTD or APEX Integration Inc. Always have an experienced installer perform installation work.



2 Locate the appropriate vehicle specific ECU wiring diagram from the provided tables



3 While referring to the vehicle specific wiring diagram tables, securely connect the SUPER AFC to the appropriate Power, Ground, Engine RPM, and Throttle Signal wires using the provided splitting taps.



Red Wire- POWER  
 Green Wire- Engine RPM  
 Gray Wire- Throttle Signal Wire  
 Black Wire- Ground  
 Brown Wire- Ground

※Please also refer to **P43 · P44**

### ▲ CAUTION

- Be sure to ground the BLACK AND BROWN wires of the SUPER AFC harness. Failure to do so will result in improper operation and vehicle damage.

## ■ Installation (cont'd)

### ⚠ CAUTION

- Be sure not to short any wire when looking for the proper connection. This could lead to electrical fire and damage to the vehicle.
- Be sure to securely fasten the splitting taps and avoid all loose connections. Loose electrical wires can cause product failure and vehicle damage.

4 Locate the appropriate air flow/pressure sensor signal wire from the vehicle specific wiring diagram table and connect the fittings to the wire



Male Fitting—ECU side

Female Fitting—Air Flow Sensor/Pressure Sensor side

RB26DETT motors have 2 wires. Please cut BOTH wires.

5 Connect the SUPER AFC harness to the fittings above



Hot-Wire

Flap Female Fitting - White Wire

Pressure Sensor Male Fitting—Yellow Wire

Karman Female Fitting—Orange Wire

Male Fitting—Pink Wire

6 Securely cover ALL connections with electrical tape




7 Reconnect the negative terminal of the battery.

① Strip 5mm of the cover



② Cover the sleeve

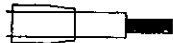


③ Connect the fitting



Be sure to have a secure connection

# Wiring Diagram


※For vehicles with Hot-wire, Flap, or Pressure Sensor

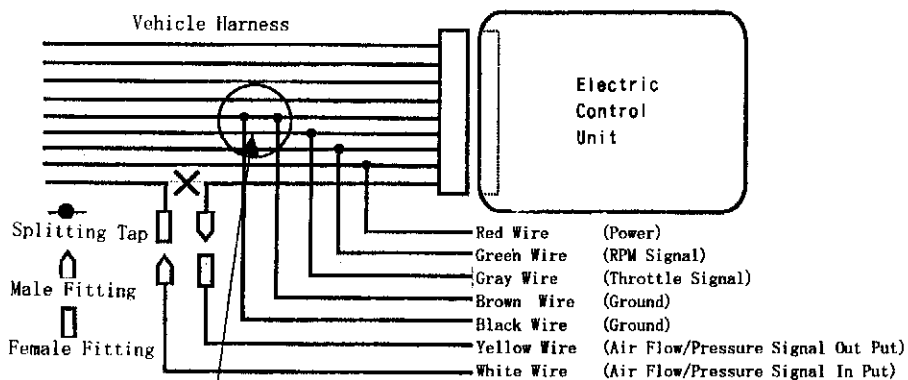

**CAUTION**

- Be sure to connect the brown wire CLOSER to the ECU than the black wire. Failure to do so MAY HIGHLY result in improper product operation and engine damage.


※For vehicles equipped with RB26DET

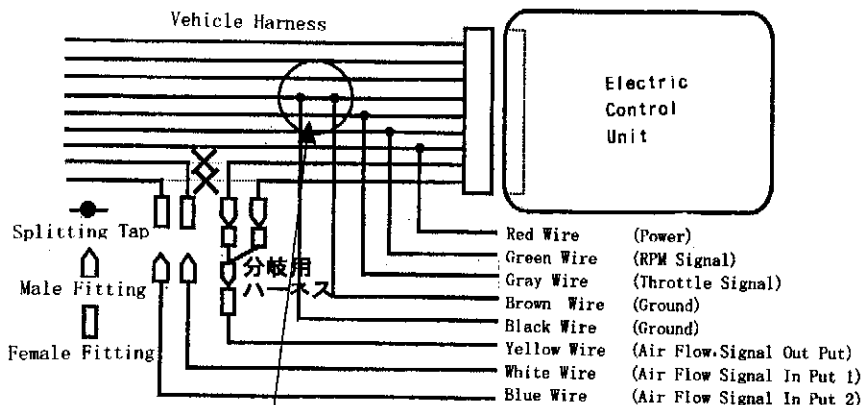

**CAUTION**

- Be sure to connect the brown wire CLOSER to the ECU than the black wire. Failure to do so MAY HIGHLY result in improper product operation and engine damage.

### ※ Karman Type Vehicles

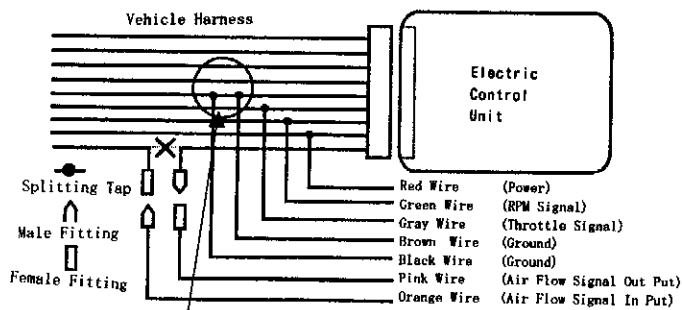

### ⚠ CAUTION

- Be sure to connect the brown wire CLOSER to the ECU than the black wire  
Failure to do so MAY HIGHLY result in improper product operation and engine damage.

### ⚠ WARNING

- Be sure to install the SUPER AFC so that it does not interfere with driving  
Failure to do so may impair driving procedure and cause accidents
- Do not install the SUPER AFC near high temperatures or direct water  
This may lead to unit malfunction which may cause electrical shorts, electrical fire, and engine damage
- Be sure to avoid any moving parts when routing the SUPER AFC harness  
The harness may be cut and cause electrical shorts, electrical fires  
SUPER AFC may malfunction causing severe engine damage.



## ● Checkpoints after Installation

Please check the following points after installation

- Has the SUPER AFC harness been properly connected?
- Is there any excess strain on the harness?
- Has the SUPER AFC been securely mounted?
- Has the negative (-) terminal of the battery been properly reconnected?

## ● With the Ignition Key ON . . .

Please check the following points with the Ignition Key ON

- Does the SUPER AFC display properly illuminate?

If any of these conditions exist, discontinue use immediately and please kindly repack the unit and take it to the dealer of purchase if there seems to be a product malfunction.

- Are there any unusual sounds or smell coming from the SUPER AFC?

If any of these conditions exist, discontinue use immediately and please kindly repack the unit and take it to the dealer of purchase if there seems to be a product malfunction.

- Was the initialization of the SUPER AFC performed?

After installation, the proper sensor type, cylinder number, and throttle sensor type must be input for proper operation. Please confirm proper settings before operation.

## In Case of Malfunction

### ⚠ CAUTION

- Never perform repairs or modifications to the unit.

Improper modifications may result in electrical shorts and electrical fires. This could lead to severe engine damage.

### ⚠ WARNING

- If any unusual odors or sounds come from the unit, discontinue use immediately and return the unit to the dealer of purchase.

Continued use may result in electrical shorts, and electrical fires.

- APEX Co.Ltd. reserves the right to update the price, contents, functions of this product without prior notification
- This instruction manual is subject to change without prior notification
- This unit has been designed for Japanese specification vehicles  
Unauthorized overseas use is prohibited. ( Certain United States models exempt)

This product is designed for domestic use only.

It must not be used in any country outside of Japan and the United States.

## Product Specifications

- Operational Voltage DC8V~DC16V
- Operating temperature -20°C~+60°C

## About the Warranty

This product does not have any warranty expressed or implied outside of Japan.  
United States (APEX Integration Inc.)

Malfunctioning units should be returned to the dealer of purchase with authorized proof of purchase. Warranty terms will be determined at the sole discretion of the trained APEX engineer after inspection. Inspection time may vary according to product and complexity of claim. APEX reserves the right to refuse warranty service for any unit showing signs of tampering or installation error.

## Manual Information

No.	Press Date	Product Code	Version
1	1999年04月05日	7107-0060-00	No.1

Sales Office

## APEX Company LTD.-APEX Integration Inc (USA)

Overseas dept 〒229-1124 Kanagawa-Ken, Sagami-hara-city, 10440-1 TEL.042-778-3991 FAX.042-778-5873  
Apex Integration Inc. 130 McCormick Ave #107, Costa Mesa CA 92626 Tel 714-444-4378 Fax 714-444-4379